



AMS Tracker Thermal Control Subsystem DS Integration Procedure TTCB-P & TTCB-S

AMSTR-AIDC-PR-037C
ISSUE 1.0
23 JULY 2009

Sun Yat-Sen University (SYSU)
National Aerospace Laboratory (NLR)
Istituto Nazionale di Fisica Nucleare (INFN)

	NAME	ORGANISATION/RESPONSIBILITY	SIGNATURE	DATE
PREPARED	J. van Es/E. Laudi	NLR		
CHECKED	J. van Es	NLR / AMS TTCS System Eng.		
AGREED	E. Laudi	INFN		
APPROVED	J. van Es	NLR / AMS TTCS PM		
AUTHORISED				

FILENAME	AMSTR-AIDC-PR-037Z_Thermal Switch and Sensor Gluing Dallas_sensor_TTCB_iss01.doc	ORDER-/CODENUMBER:	
LAST SAVED	2009.07.23 12:06 by jvanes	DIVISION:	
PRINTED	2009.07.24 11:02	DISTRIBUTION:	Unlimited
PAGES	16	CLASSIFICATION TITLE:	Unclassified

*No part of this document may be reproduced and/or disclosed, in any form or by any means,
without the prior written permission of NLR.*



AMS Tracker Thermal Control Subsystem

DS Integration Procedure TTCB-P &

Page 2 of 28
Doc.Id AMSTR-AIDC-PR-037C
Issue 1.0
Date 23 July 2009

Distribution list

Company	FOR*	Name	Comments
INFN	I	R. Battiston	
		M. Menichelli	
		C. Gargiulo	
		B. Alpat	
		A. Alvino	
		E. Laudi	
AMS	I	M. Capell	
		V. Koutsenko	
		R. Becker	
NLR	I	P. Dieleman	
		J.van Es	
		M. Bardet	
Jacobs Sverdrup	I	T. Martin	
		G. Clark	
AIDC	I	A.Shue	
		B. Hsu	
		W. Min Hsu	
CGS	I	M. Molina	
		C. Vettore	

A = Approval
R = Review
I = Input / Information

An electronic version of this document is available on the AMS TTCS website:
<https://ams-ttcs.nlr.nl>



**AMS Tracker
Thermal Control
Subsystem**
DS Integration Procedure TTCB-P &

Page 3 of 28
Doc.Id AMSTR-AIDC-PR-037C
Issue 1.0
Date 23 July 2009

Document change log

<u>Change Ref.</u>	<u>Section(s)</u>	<u>Issue 1.0</u>
-	All	Initial issue



**AMS Tracker
Thermal Control
Subsystem**
DS Integration Procedure TTCB-P &

Page	4 of 28
Doc.Id	AMSTR-AIDC-PR-037C
Issue	1.0
Date	23 July 2009

Contents

Document change log	3
1 Scope of the integration procedure	6
2 Equipment list	6
3 List of to be documented values	6
4 Gluing Integration Procedure in main steps	7
5 References documents	8
6 Gluing integration procedure	9
6.1 Dallas sensor gluing integration procedure sheets	9
6.2 Gluing Integration procedure sheet	10
6.2.1 Gluing procedure GSTN network DS on TTCB-P & TTCB-S	10
7 Appendix A: Glue Location TTCB-P	12
8 Appendix B: Glue Location TTCB-S	14



**AMS Tracker
Thermal Control
Subsystem**
DS Integration Procedure TTCB-P &

Page	5 of 28
Doc.Id	AMSTR-AIDC-PR-037C
Issue	1.0
Date	23 July 2009

Error! Bookmark not defined.

END OF DOCUMENT

16

(16 pages in total)



AMS Tracker Thermal Control Subsystem

DS Integration Procedure TTCB-P &

Page	6 of 28
Doc.Id	AMSTR-AIDC-PR-037C
Issue	1.0
Date	23 July 2009

1 Scope of the integration procedure

The procedure in this document describes the gluing of component thermal switches to the TTCS condensers.

2 Equipment list

Clean room ,class 100000 (min)

Vacuum Chamber (BLUE M , BINDER or equivalent function)

3 List of to be documented values

For these integration procedures it is important the following parameters/values are listed:

1. The expiry dates of adhesive shall be written in the procedure sheet of Section 6.2
2. The work life of the mixed adhesive is 90 minutes.
3. Mixing Rate :
Weight ration Part A (gray): Part B (off-white)= 7 : 5
or Volume ration Part A (gray): Part B (off-white)= 3 : 2
4. The curing time / temperature of glue shall follow the table in the item 6 of Section 4
5. List series number, type and mass of integrated TS's
6. List Pt1000 numbers and type



AMS Tracker Thermal Control Subsystem

DS Integration Procedure TTCB-P &

Page	7 of 28
Doc.Id	AMSTR-AIDC-PR-037C
Issue	1.0
Date	23 July 2009

4 Gluing Integration Procedure in main steps

The main integration procedure steps are:

1. Cleaning

- Use the IPA solvent to clean the area where (both surfaces to be jointed) the thermal switch and sensor will be glued, in order to remove all dust, dirt, grease, rust, etc.
- The size of area to be cleaned shall be larger than the size of area to be glued
- Visually check the cleaned area is clean after waiting the area is dry. Don't touch the cleaned area.
- If the cleaned area isn't clean, repeat the steps (a) ~ (c).

If the cleaned area isn't still clean after repeating three times, contact the engineers.

2. Adhesive checking

The adhesive shall be : **3M 2216 Gray, Epoxy adhesive, Part A & Part B.**

Make sure the adhesive is during the shelf life.

3. Adhesive preparation

The adhesive is two-part (Part A & Part B). Take the proper weight (or volume) ration of Part A and Part B from the cans.

Weight ration Part A (gray): Part B (off-white)= 7 : 5

Or Volume ration Part A (gray): Part B (off-white)= 3 : 2

Close the cans.

Mix two parts until uniform color is obtained.

Keep mixing approximately 15 seconds.

Put the mixed adhesive in the vacuum chamber to make the bubble out of the mixed adhesive.

The following steps shall be finished during the work life of the mixed adhesive. The work life is 90 minutes

4. Mixed adhesive application

Apply the mixed adhesive on the area where (both surfaces to be jointed) the thermal switch and sensor will be glued with the spatula or trowel. Remove the redundant adhesive if/as required.

5. Gluing

Put thermal switch and sensor on the applied adhesive with contact pressure. Make the sufficient mixed adhesive around and under the thermal switch and sensor. However under



AMS Tracker Thermal Control Subsystem

DS Integration Procedure TTCB-P &

Page 8 of 28
Doc.Id AMSTR-AIDC-PR-037C
Issue 1.0
Date 23 July 2009

the sensor just sufficient, while the thermal resistance between object and sensor shall be minimized. Note the direction requirement of thermal switch and sensor after gluing .

6. Hardening

Thermal switch and sensor must be kept aligned during cure. Cure time/temperature as the following table :

Product	3M™ Scotch-Weld™ Epoxy Adhesive	
	2216 Gray	
Cure Temperature	Time	
75°F (24°C)	7 days	
150°F (66°C)	120 minutes	
200°F (93°C)	30 minutes	

5 References documents

	Title	Number	Date
RD-1	Scotch-Weld™ Epoxy Adhesive 2216 B/A Technical Data	None	August,2005
RD-2	Asembly Thermal Tracker Control Box Primary	ET5998-06-DR-001-E-PP- ASSEMBLY TTC BOX	14-11-2009
RD-3	Asembly Thermal Tracker Control Box Secondary	ET5998-00-DR-001-E-PP- ASSEMBLY TTC BOX	17-11-2009



AMS Tracker Thermal Control Subsystem

DS Integration Procedure TTCB-P &

Page 9 of 28
Doc.Id AMSTR-AIDC-PR-037C
Issue 1.0
Date 23 July 2009

6 Gluing integration procedure

6.1 Dallas sensor gluing integration procedure sheets

The Switch and sensor integration procedure sheets shall be filled in, and shall accompany the condenser during it's lifetime in order to be able to show the procedure was followed.

The switches are as the following :

Item	Name	Manufacturer & Type
1	Dallas sensor	DS18S20 max dimensions 4.95 x4.95 x 3.94 mm)



AMS Tracker Thermal Control Subsystem

DS Integration Procedure TTCB-P & TTCB-S

Page 10 of 28
Doc.Id. AMSTR-AIDC-PR-037C
Issue 1.0
Date 23 July 2009

6.2 Gluing Integration procedure sheet

6.2.1 Gluing procedure GSTN network DS on TTCB-P & TTCB-S

	Title: Dallas Sensor Gluing TTCB-P and TTCB-S	Company: AMS Integration team	Project engineer:	date:	
	Fill in by hand.	Component:	Quality Assurance engineer:	location:	
	Drawing numbers: (see attached locations in Appendix)	Part number:	Serial no/Lot no:		
				Verification	
Step	Operation	Documented Parameters		Tech √	QA √
1.	The adhesive shall be 3M 2216 “ Gray ” (Part A & Part B)				
2.	Adhesive is during the shelf life. Write the expiry date in the right column.				
3.	Sufficiently cleaning with IPA before gluing				
4.	The mixing rate shall be Weight ration Part A (gray): Part B (off-white)= 7 : 5 Or Volume ration Part A (gray): Part B (off-white)= 3 : 2 Write the actual data in the right column				
5.	Mix two adhesive parts until uniform color is obtained.				
6.	Vacuum the mixed adhesive.				
7.	Sufficient mixed adhesive around and under the thermal switch and sensors, not too much under sensor				
8.	All steps shall be finished during the adhesive work life 90 minutes				
9.	The curing time /temperature of glue shall follow the table in the item 6 of Section 4 and write the actual data in the right column				



AMS Tracker Thermal Control Subsystem

DS Integration Procedure TTCB-P & TTCB-S

Page 11 of 28
Doc.Id. AMSTR-AIDC-PR-037C
Issue 1.0
Date 23 July 2009

	Title: Dallas Sensor Gluing TTCB-P and TTCB-S	Company: AMS Integration team	Project engineer:		date:	
	Fill in by hand.	Component:	Quality Assurance engineer:		location:	
	Drawing numbers: (see attached locations in Appendix)	Part number:	Serial no/Lot no:			
					Verification	
Step	Operation		Documented Parameters		Tech √	QA √
10.	Install DS sensors in TTCB-P as depicted in Appendix A					
11.	Install DS–JPD(6)–19 B in TTCB-P					
12.	Install DS–JPD(6)–19 B in TTCB-P					
13.	Install DS sensors in TTCB-S as depicted in Appendix B					
14.	Install DS–JPD(6)–28 A in TTCB-S					
15.	Install DS–JPD(6)–28 B in TTCB-S					
16.	Check Cleanliness of glue around DS					
17.	In case lots of spill remove glue					
18.	Take pictures of installed DS and file in same directory as procedure.					
19.	End of Procedure					



AMS Tracker Thermal Control Subsystem

DS Integration Procedure TTCB-P &

Page

Doc.Id

Issue

Date

12 of 28


AMSTR-AIDC-PR-037C

1.0

23 July 2009

7 Appendix A: Glue Location TTCB-P

TTCB primary

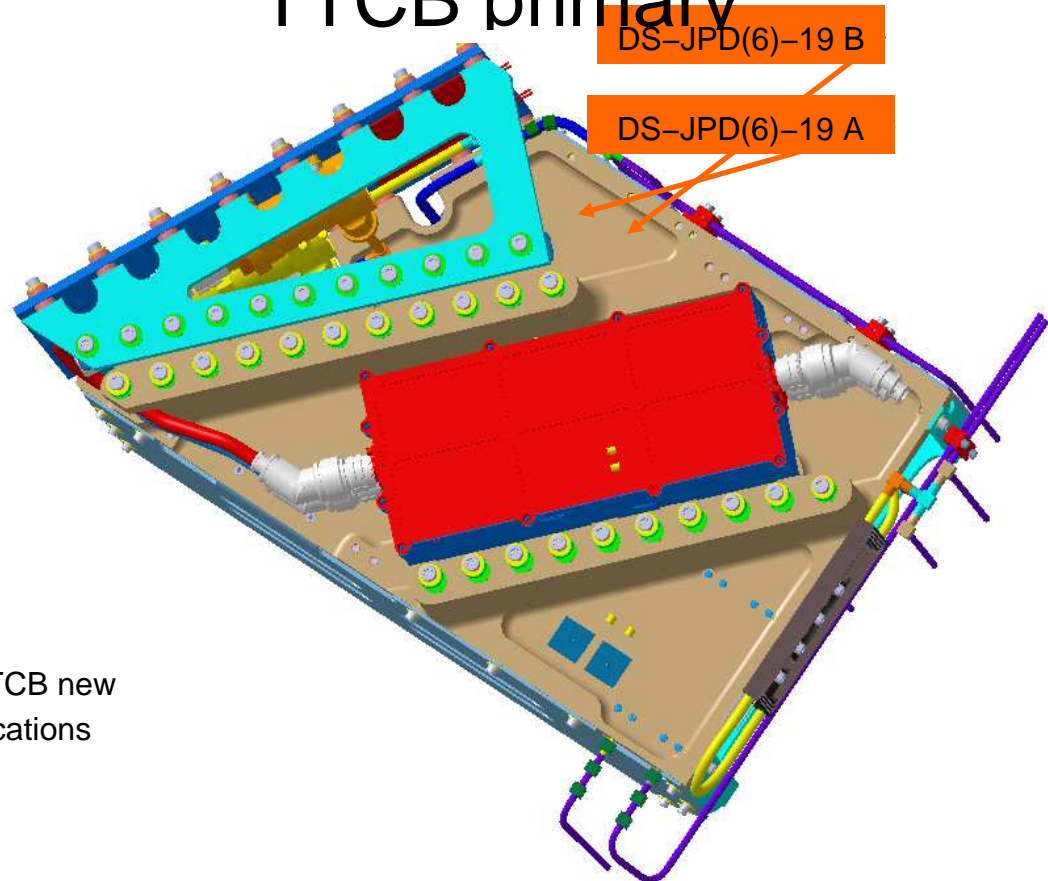

TTCB new
locations



AMS Tracker Thermal Control Subsystem

DS Integration Procedure TTCB-P &

Page

Doc.Id

Issue


Date

13 of 28

AMSTR-AIDC-PR-037C

1.0

23 July 2009

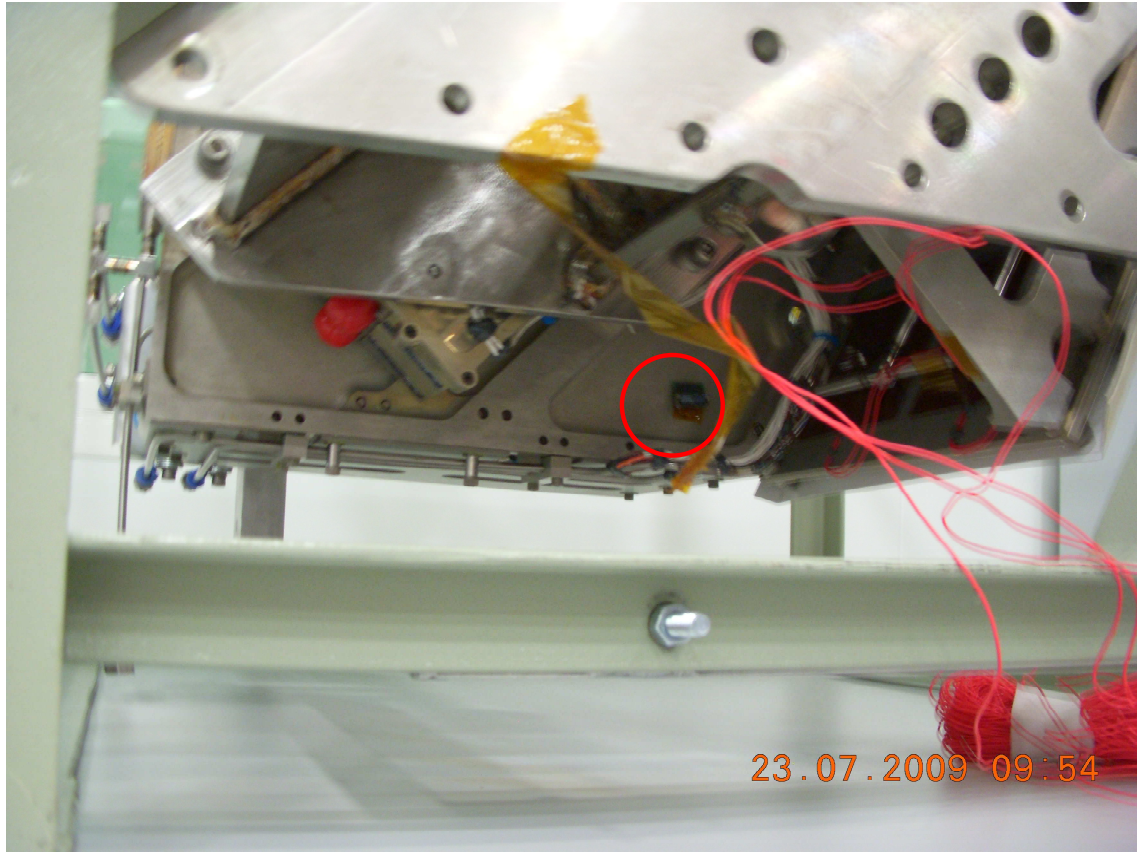



AMS Tracker Thermal Control Subsystem

DS Integration Procedure TTCB-P &

Page

Doc.Id

Issue

Date

14 of 28


AMSTR-AIDC-PR-037C

1.0

23 July 2009

8 Appendix B: Glue Location TTCB-S

TTCB secondary

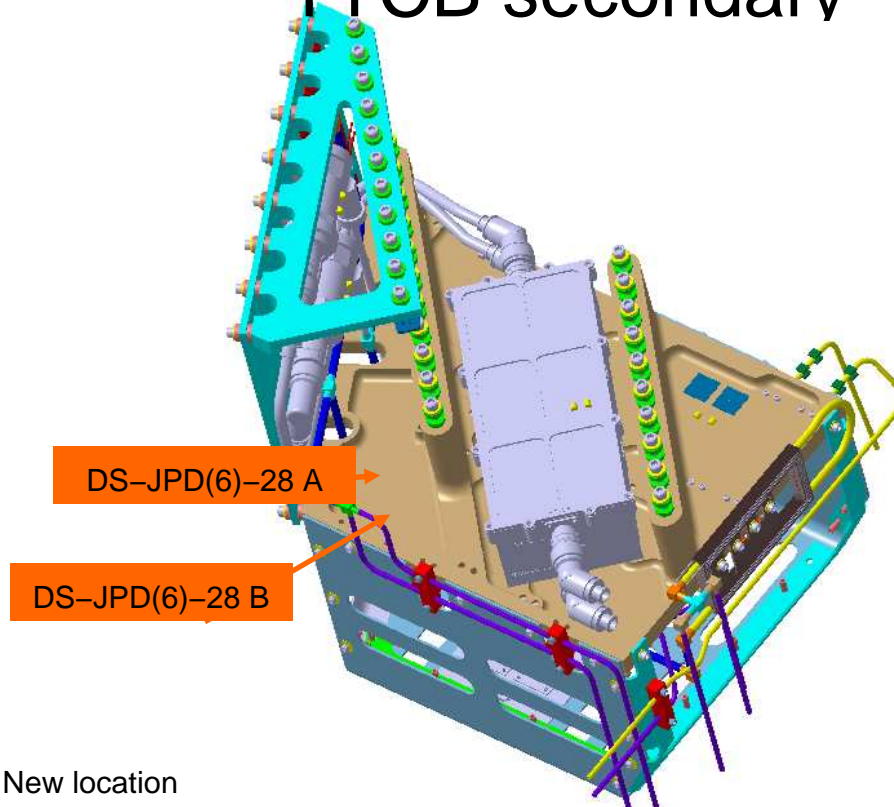



AMS Tracker Thermal Control Subsystem

DS Integration Procedure TTCB-P &

Page

Doc.Id

Issue


Date

15 of 28

AMSTR-AIDC-PR-037C

1.0

23 July 2009

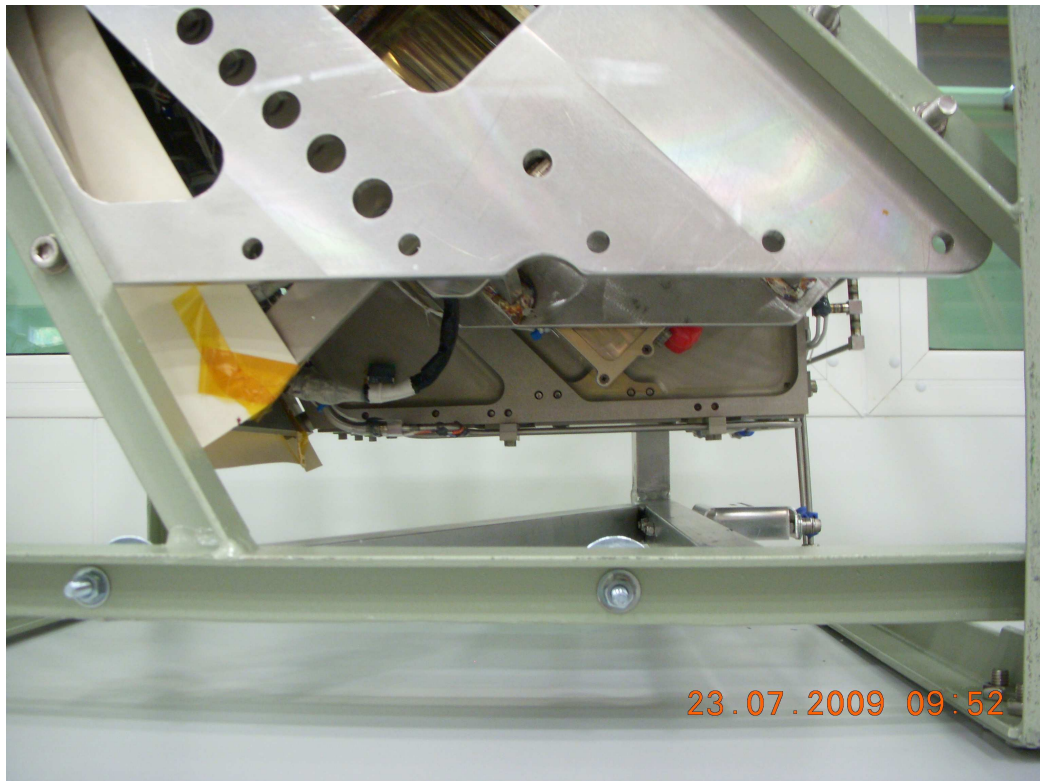



AMS Tracker Thermal Control Subsystem

DS Integration Procedure TTCB-P &

Page	16 of 28
Doc.Id	AMSTR-AIDC-PR-037C
Issue	1.0
Date	23 July 2009

END OF DOCUMENT